


## New Construction Window and Flashing Detail Use 8" Wide Flashing

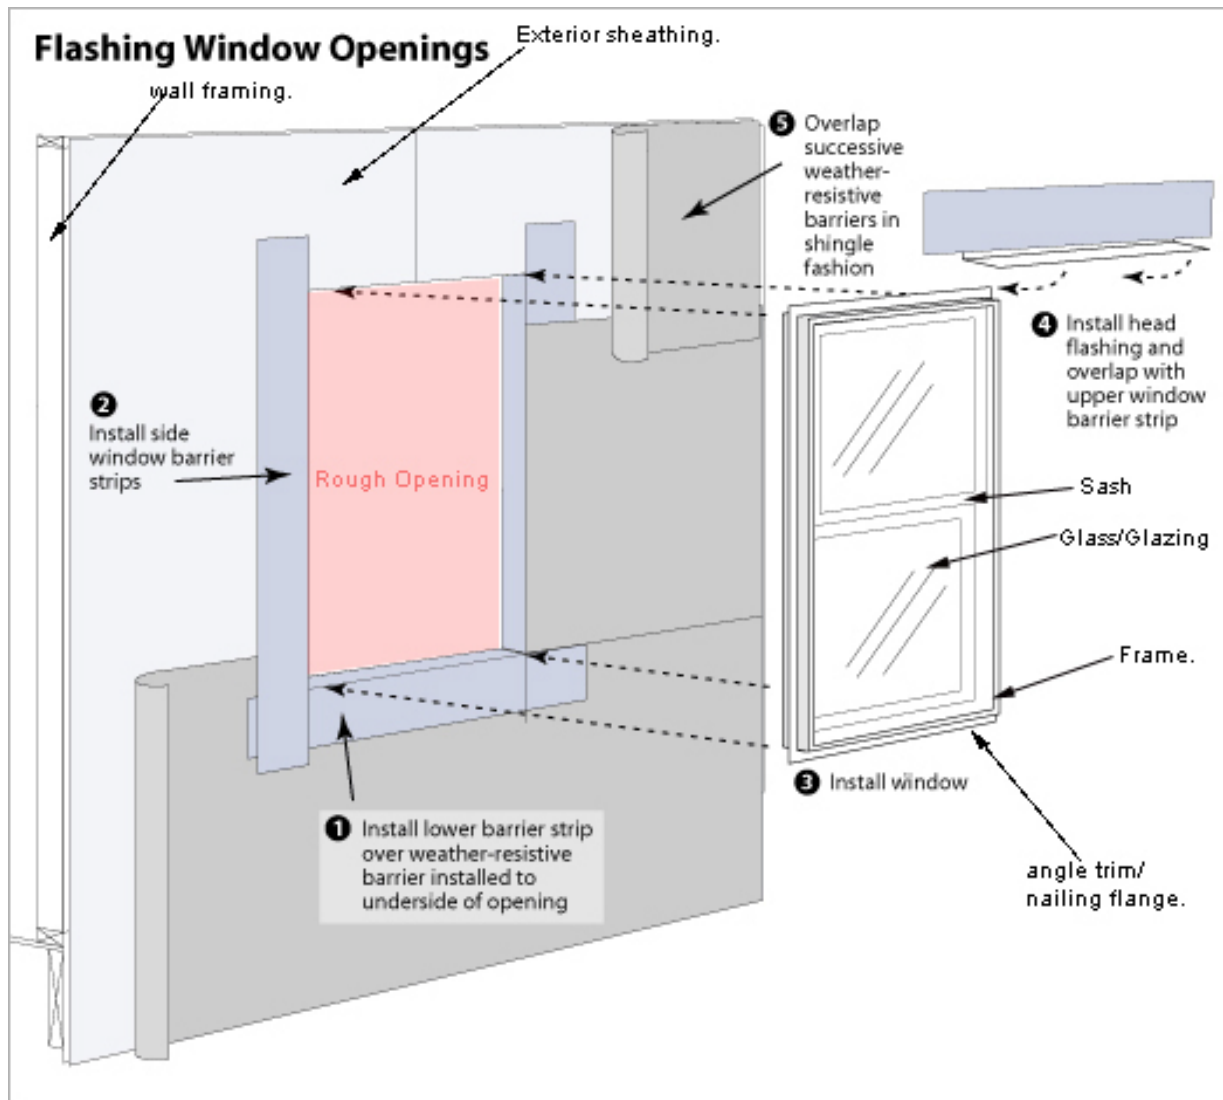

Install caulking between back of window flange and window flashing.